


ROOM THERMOSTAT OPERATION.

SET DIAL FOR TEMPERATURE DESIRED.

DISPLAY OF ACTUAL ROOM
TEMPERATURE

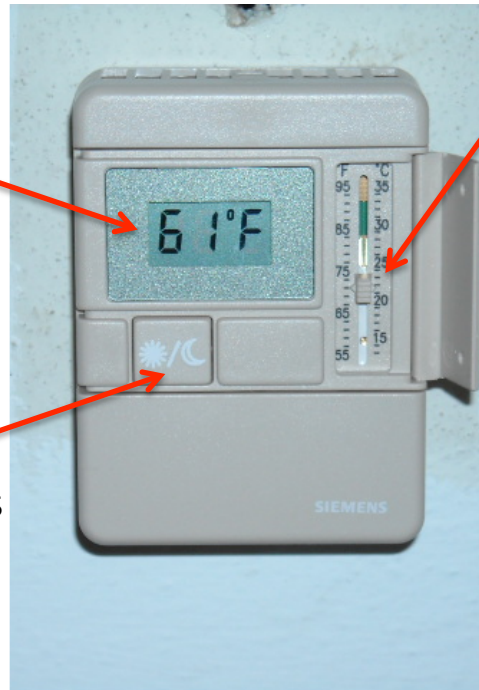

PRESS BUTTON FOR 5 SECONDS
HEAT OR COOLING WILL START
IN 5 MINUTES AND RUN
FOR 2 HOURS.

TEMPERATURE CAN BE ADJUSTED BETWEEN;
WINTER HEATING 62°F TO 71°F.
SUMMER COOLING 74°F TO 90°F.
IF YOU WANT TO SCHEDULE THE HEATING OR COOLING
CONTACT WORKBOX AT LEAST 48 HOURS BEFORE THE EVENT.